CHAPTER 4. PARTS CATALOG

CONTENTS

CANON EOSD30

C18-1021

N.S : N.S Stand for No Stock

PARTS LIST

REF.NO. C18-1021

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-2474-000	B	1	CAP, PC TERMINAL
	CB1-7757-000	B	1	CAP, REMOTE
*	CB2-0559-000	B	1	CAP, DIGITAL TERMINAL
*	CB2-0568-000	C	1	COVER, DIGITAL TERMINAL
*	CB2-0589-000	C	1	CUSHION
*	CB2-0666-000	C	1	COVER, DATE BATTERY
*	CB2-0680-000	B	1	RUBBER, GRIP
*	CB2-0686-000	C	1	HINGE, B-DOOR
*	CB2-0719-000	C	1	SCREW M17X5.5
*	CB2-0720-000	C	1	SCREW M17X6
*	CF1-3855-000	B	1	RUBBER, BACK
*	CG1-3786-000	B	1	DOOR ASS'Y, MAIN BATTERY
*	CY1-6063-000	B	1	PLATE, NAME
	XA1-3170-207	F	2	SCREW M17X2

CLASS凡例

A: 使用頻度　高
B: 使用頻度　中
C: 使用頻度　低
D: 安全規格部品
E: 消耗部品
F: 標準ネジ、ワッシャー
S: 供給制限品

Category of CLASS

A: Frequency of use: High
B: Frequency of use: Middle
C: Frequency of use: Low
D: Safety-related critical parts
E: Consumable parts
F: Standard screws and washers
S: Supply of the parts is limited

CANON EOSD30

C18-1021
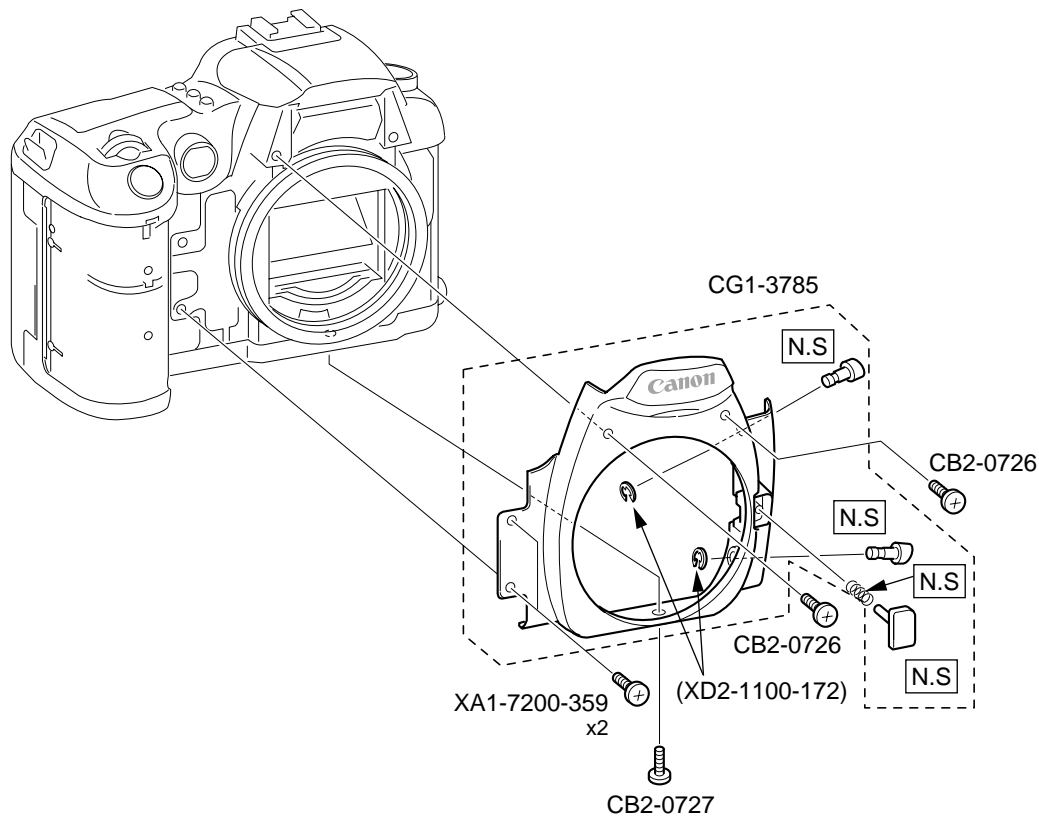
P A R T S L I S T

REF.NO. C18-1021

NEW	PARTS NO.	CLASS	QTY	D E S C R I P T I O N
*	CB2-0726-000	C	2	SCREW M17X5.5
*	CB2-0727-000	C	1	SCREW M17X4.5
*	CG1-3785-000	B	1	COVER ASS'Y, FRONT
	XA1-7200-359	F	2	SCREW M2X3.5
	XD2-1100-172	F	2	E RING

CANON EOSD30
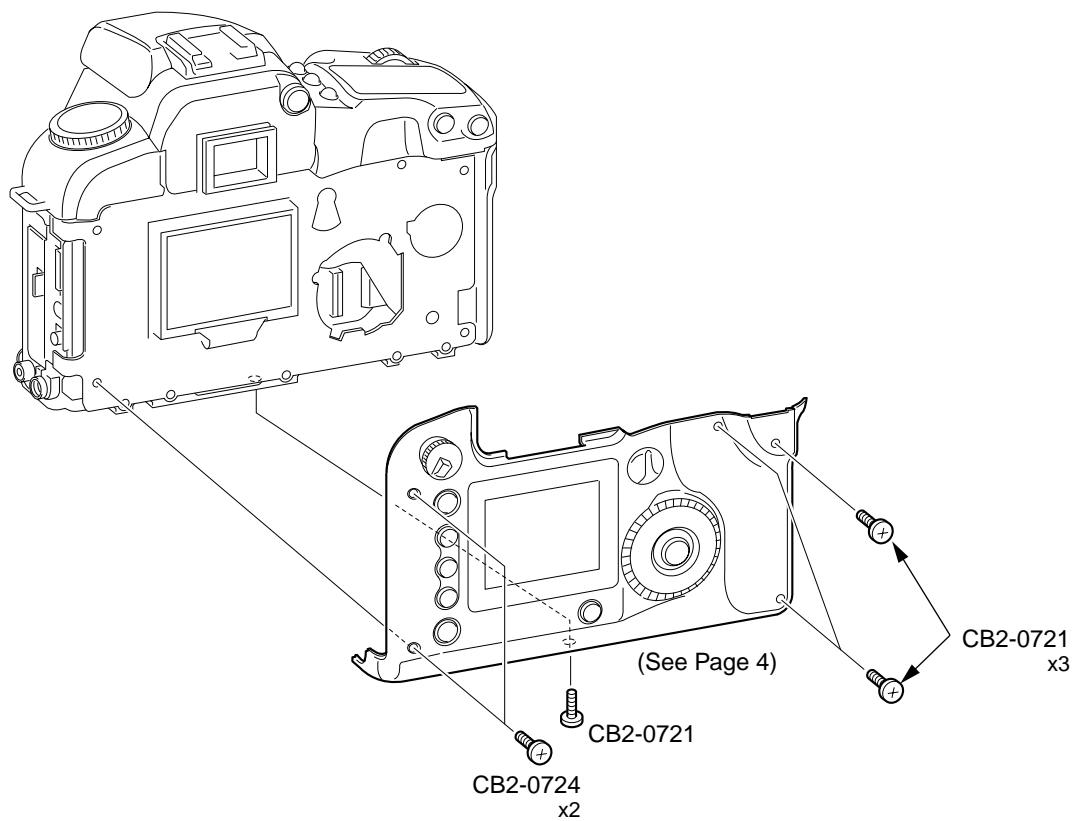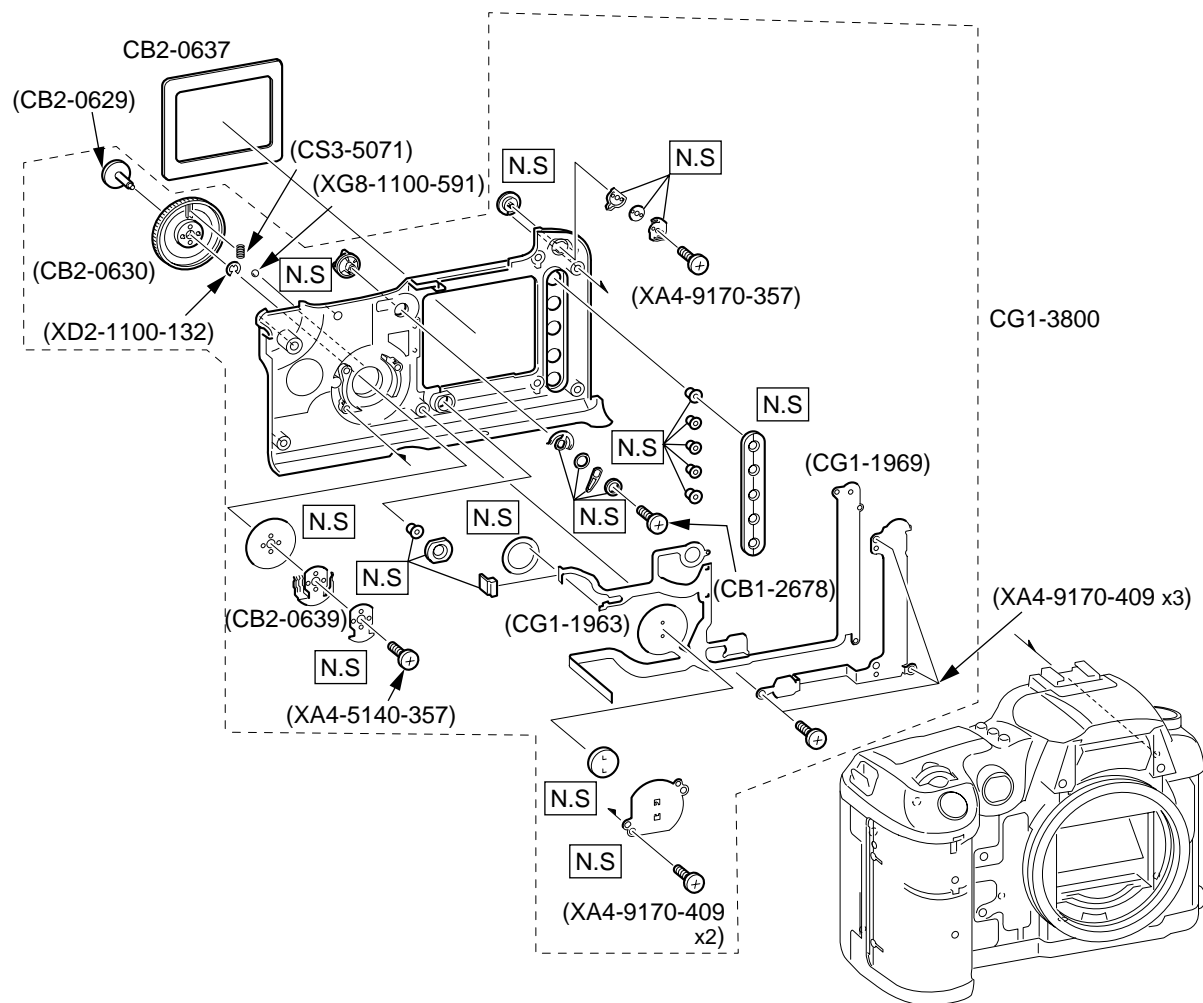
C18-1021

P A R T S L I S T

REF.NO. C18-1021

NEW	PARTS NO.	CLASS	QTY	D E S C R I P T I O N
*	CB2-0721-000	C	4	SCREW M17X2.5
*	CB2-0724-000	C	2	SCREW M17X4.5

CANON EOSD30

C18-1021

P A R T S L I S T

REF.NO. C18-1021

NEW	PARTS NO.	CLASS	QTY	D E S C R I P T I O N
	CB1-2678-000	C	1	SCREW M17X2.5
*	CB2-0629-000	C	1	BUTTON, BC DIAL
*	CB2-0630-000	C	1	DIAL, BACK COVER
*	CB2-0637-000	B	1	WINDOW, TFT LCD
*	CB2-0639-000	C	1	CONTACT, BC DIAL
*	CG1-1963-000	C	1	FPC ASS'Y, BUZZER
*	CG1-1969-000	C	1	FPC ASS'Y, BACK COVER
*	CG1-3800-000	B	1	COVER ASS'Y, BACK
*	CS3-5071-000	C	1	SPRING, COIL
	XA4-5140-357	F	1	SCREW M14X3.5
	XA4-9170-357	F	1	SCREW M17X3.5
	XA4-9170-409	F	5	SCREW M17x4
	XD2-1100-132	F	1	E RING
	XG8-1100-591	F	1	BALL, STEEL

CANON EOSD30

C18-1021
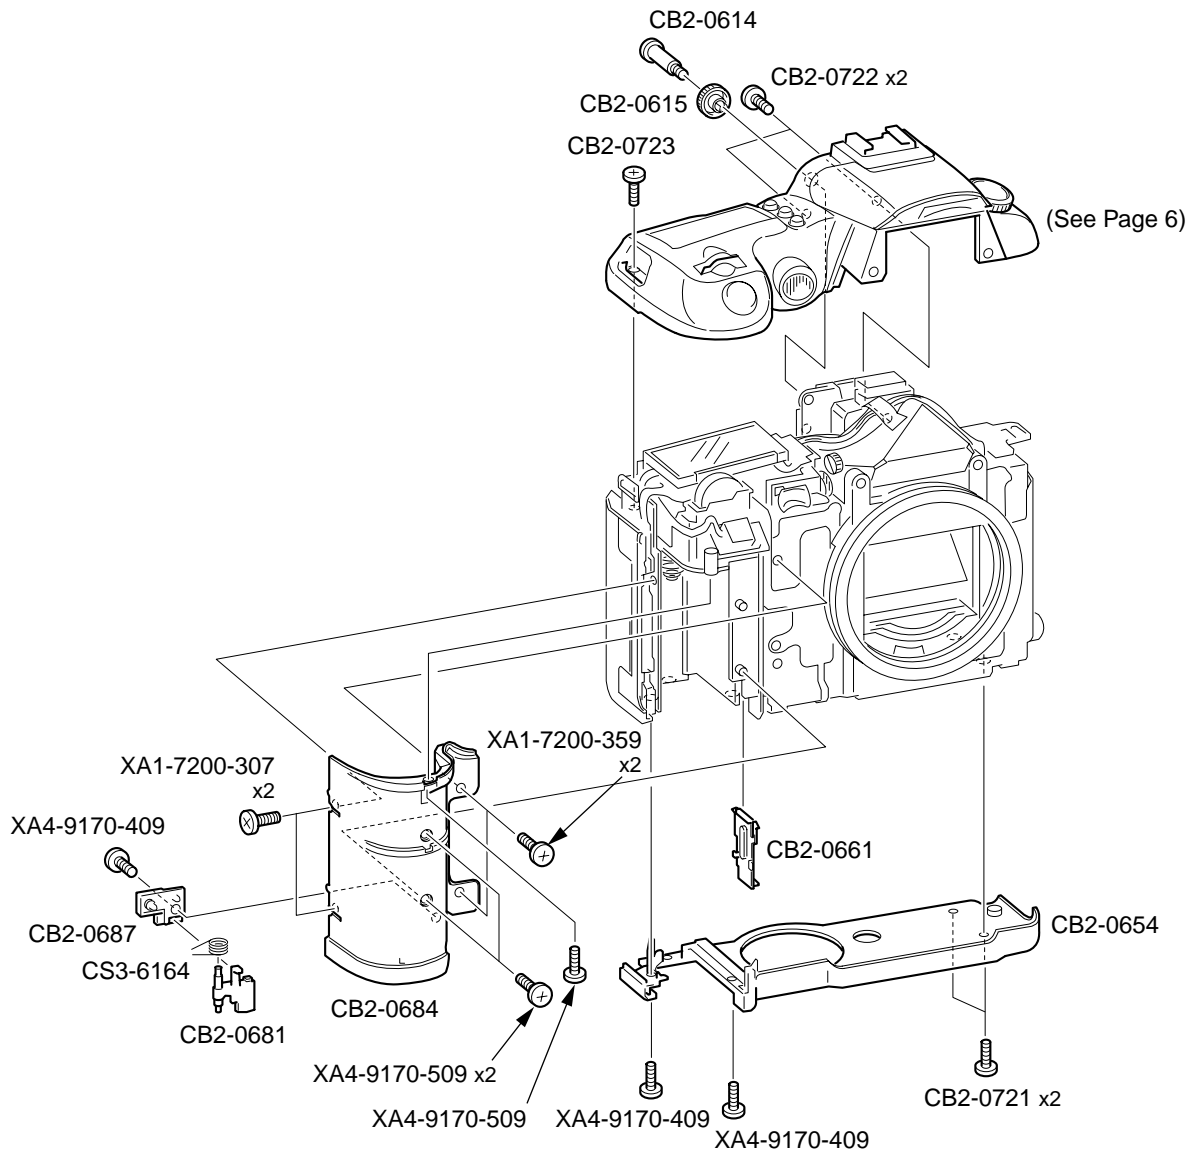
P A R T S   L I S T
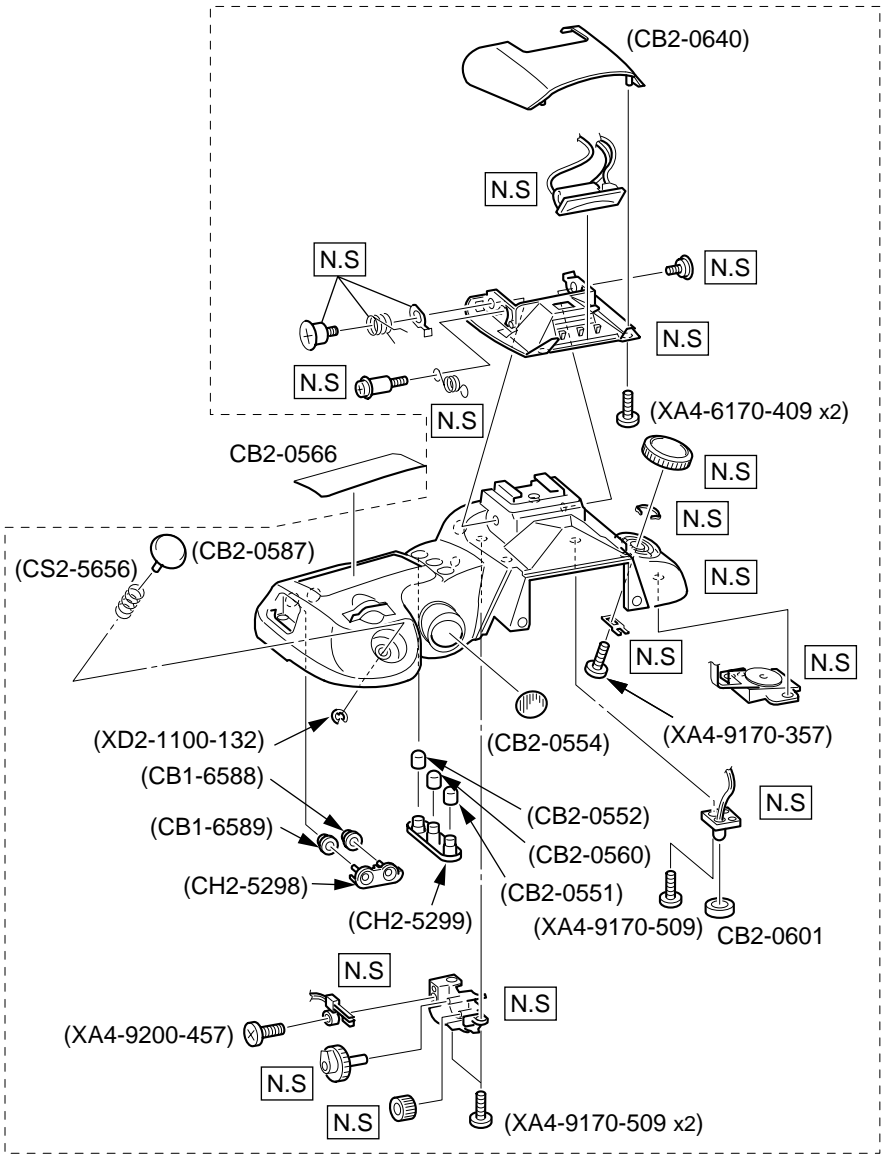
REF.NO. C18-1021

NEW	PARTS NO.	CLASS	QTY	D E S C R I P T I O N
*	CB2-0614-000	C	1	SCREW, STEP
*	CB2-0615-000	C	1	KNOB, DIOPTOR ADJ.
*	CB2-0654-000	B	1	COVER, BOTTOM
*	CB2-0661-000	C	1	DOOR, CABLE
*	CB2-0681-000	C	1	LEVER, B-LOCK
*	CB2-0684-000	C	1	GRIP
*	CB2-0687-000	C	1	PLATE, B-LOCK
*	CB2-0721-000	C	2	SCREW M17X2.5
*	CB2-0722-000	C	2	SCREW M17X5
*	CB2-0723-000	C	1	SCREW M2X6.5
*	CS3-6164-000	C	1	SPRING, B-LOCK
	XA1-7200-307	F	2	SCREW M2X3
	XA1-7200-359	F	2	SCREW M2X3.5
	XA4-9170-409	F	3	SCREW M17x4
	XA4-9170-509	F	3	SCREW M17X5

CANON EOSD30

C18-1021

P A R T S   L I S T

REF.NO. C18-1021

NEW	PARTS NO.	CLASS	QTY	D E S C R I P T I O N
	CB1-6588-000	C	1	BUTTON, AE-LOCK
	CB1-6589-000	C	1	BUTTON, AF-SELECT
*	CB2-0551-000	C	1	BUTTON, AE MODE
*	CB2-0552-000	C	1	BUTTON, AF MODE
*	CB2-0554-000	C	1	WINDOW, SUPPORT LIGHT
*	CB2-0560-000	C	1	BUTTON, DRIVE
*	CB2-0566-000	B	1	WINDOW, LCD DISPLAY
*	CB2-0587-000	C	1	BUTTON, RELEASE
*	CB2-0601-000	C	1	CUSHION, FIBER
*	CB2-0640-000	B	1	COVER, SP LIGHT
*	CG1-3774-000	C	1	COVER ASS'Y, TOP
*	CH2-5298-000	C	1	CONTACT, AE/AF SWITCH
*	CH2-5299-000	C	1	CONTACT, TOP SWITCH
	CS2-5656-000	C	1	SPRING, COIL
	XA4-6170-409	F	2	SCREW M17X4
	XA4-9170-357	F	1	SCREW M17X3.5
	XA4-9170-509	F	3	SCREW M17X5
	XA4-9200-457	F	1	SCREW M2X4.5
	XD2-1100-132	F	1	E RING

CANON EOSD30
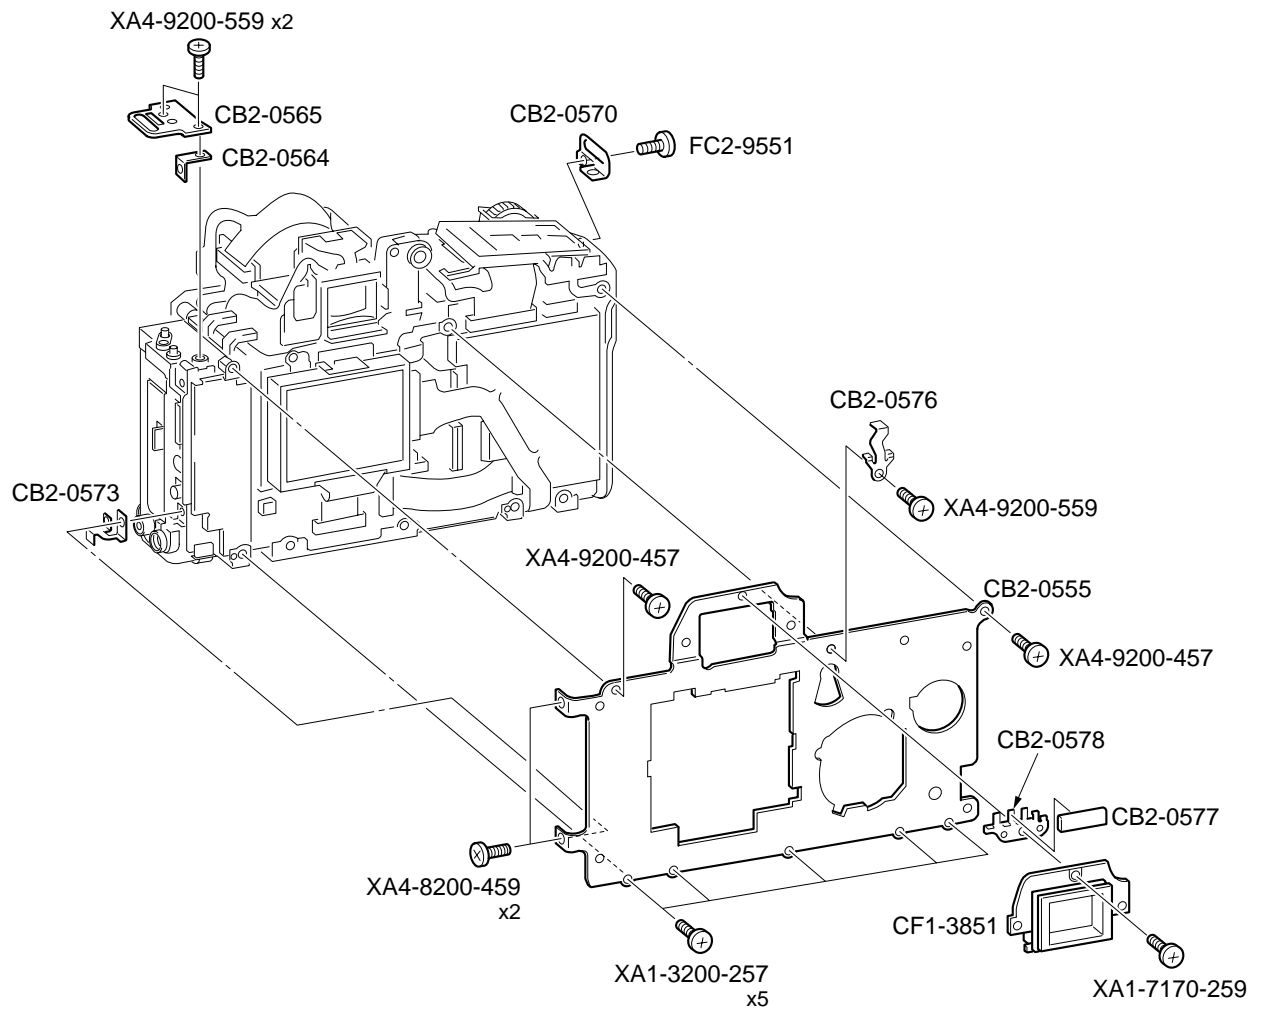
C18-1021

P A R T S   L I S T

REF.NO. C18-1021

NEW	PARTS NO.	CLASS	QTY	D E S C R I P T I O N
*	CB2-0555-000	C	1	FRAME, REAR
*	CB2-0564-000	C	1	RAG, NECK
*	CB2-0565-000	C	1	HOLDER, STRAP L
*	CB2-0570-000	C	1	HOLDER, STRAP R
*	CB2-0573-000	C	1	RAG, REMOTE
*	CB2-0576-000	C	1	RAG, DISPLAY SUPPORT
*	CB2-0577-000	C	1	SHEET, SHIELD
*	CB2-0578-000	C	1	HOLDER, SHIELD SHEET
*	CF1-3851-000	C	1	COVER ASS'Y, EYEPIECE
	FC2-9551-000	C	1	SCREW M2X2.5
	XA1-3200-257	F	5	SCREW M2X2.5
	XA1-7170-259	F	1	SCREW M17X2.5
	XA4-8200-459	F	2	SCREW M2X4.5
	XA4-9200-457	F	2	SCREW M2X4.5
	XA4-9200-559	F	3	SCREW M2X5.5

CANON EOSD30

C18-1021
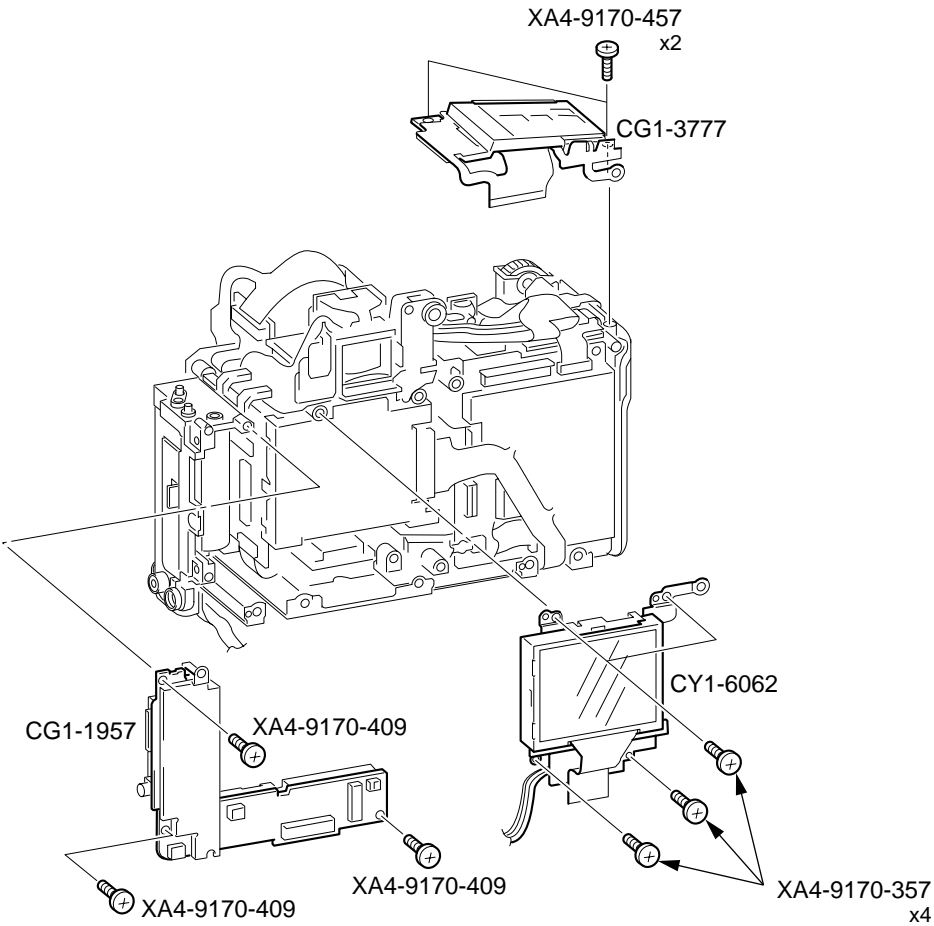
P A R T S L I S T

REF.NO. C18-1021

NEW	PARTS NO.	CLASS	QTY	D E S C R I P T I O N
*	CG1-1957-000	C	1	PCB ASS'Y, TFT
*	CG1-3777-000	C	1	OLC DISPLAY ASS'Y
*	CY1-6062-000	C	1	TFT LCD ASS'Y
	XA4-9170-357	F	4	SCREW M17X3.5
	XA4-9170-409	F	3	SCREW M17x4
	XA4-9170-457	F	2	SCREW M17X4.5

CANON EOSD30
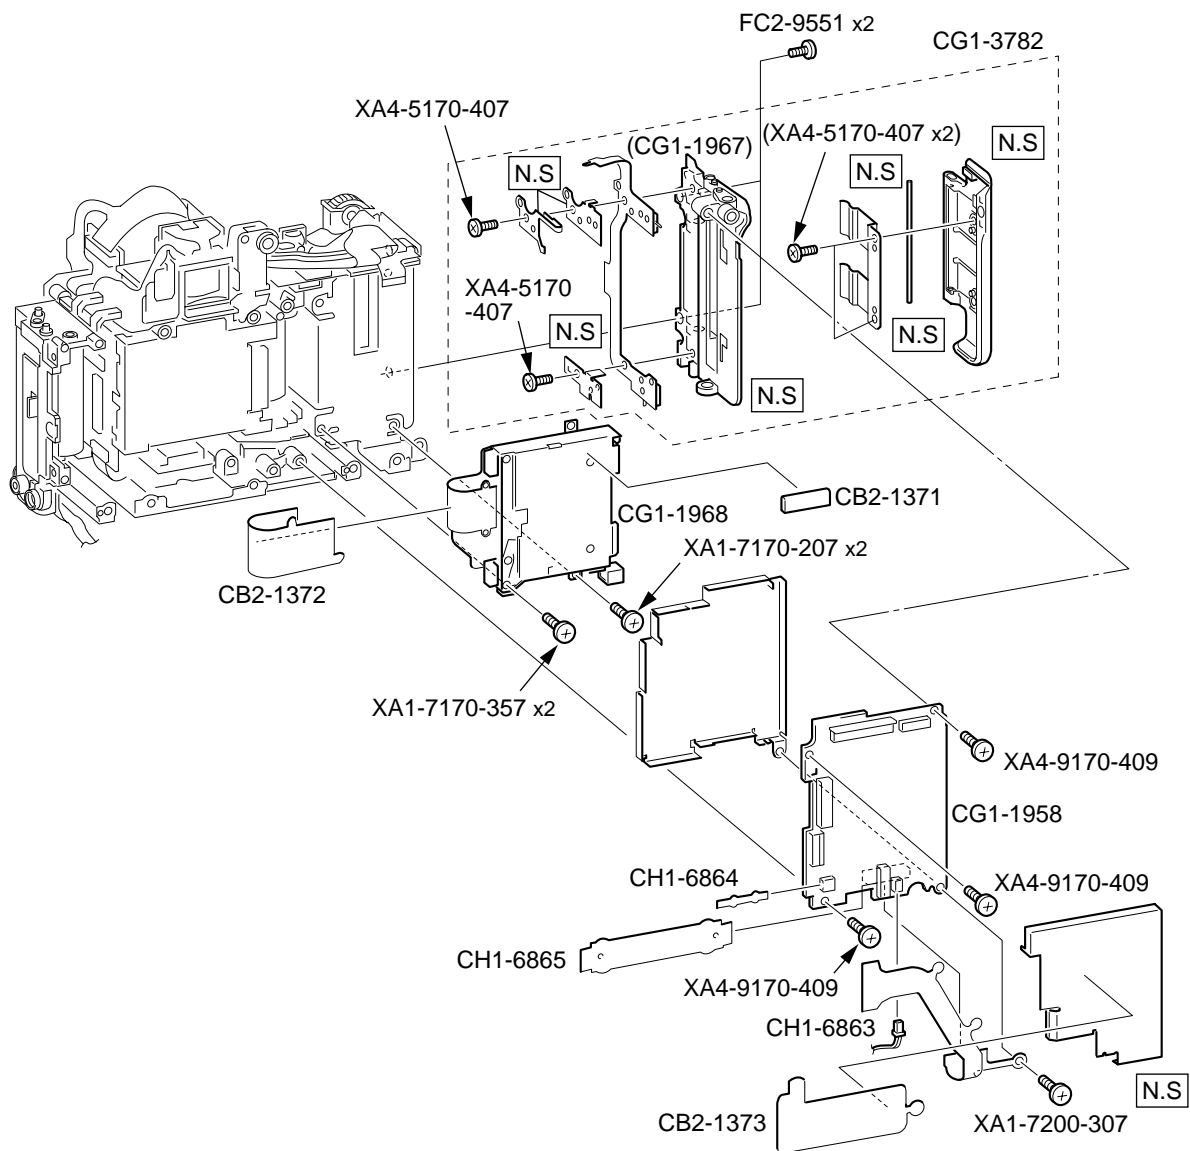
C18-1021

P A R T S   L I S T

REF.NO. C18-1021

NEW	PARTS NO.	CLASS	QTY	D E S C R I P T I O N
*	CB2-1371-000	C	1	CUSHION
*	CB2-1372-000	C	1	SHEET, SHIELD
*	CB2-1373-000	C	1	SHEET, SHIELD
*	CG1-1958-000	C	1	PCB ASS’Y, DIGITAL
*	CG1-1967-000	C	1	FPC ASS’Y, DOOR DET.SWITCHES
*	CG1-1968-000	C	1	FPC ASS’Y CF
*	CG1-3782-000	B	1	COVER ASS’Y, RIGHT SIDE
*	CH1-6863-000	C	1	FPC (ANALOG-DIGITAL)
*	CH1-6864-000	C	1	FPC (DIGITAL-TFT)
*	CH1-6865-000	C	1	FPC (DIGITAL-CAMERA MAIN)
	FC2-9551-000	C	2	SCREW M2X2.5
	XA1-7170-207	F	2	SCREW M17X2
	XA1-7170-357	F	2	SCREW M17X3.5
	XA1-7200-307	F	1	SCREW M2X3
	XA4-5170-407	F	4	SCREW M17X4
	XA4-9170-409	F	3	SCREW M17x4

CANON EOSD30
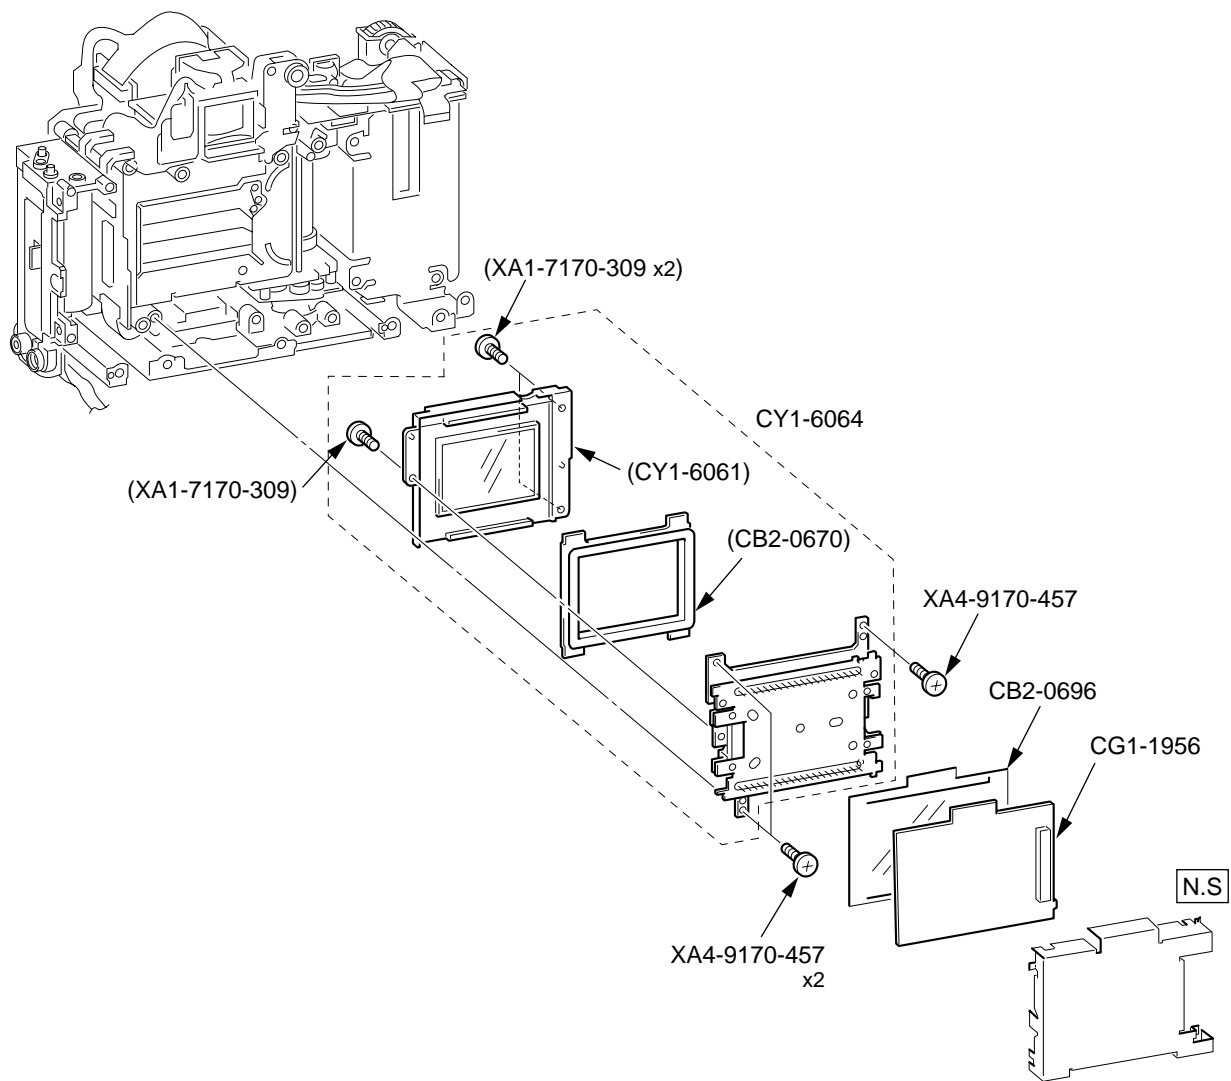
C18-1021

P A R T S L I S T
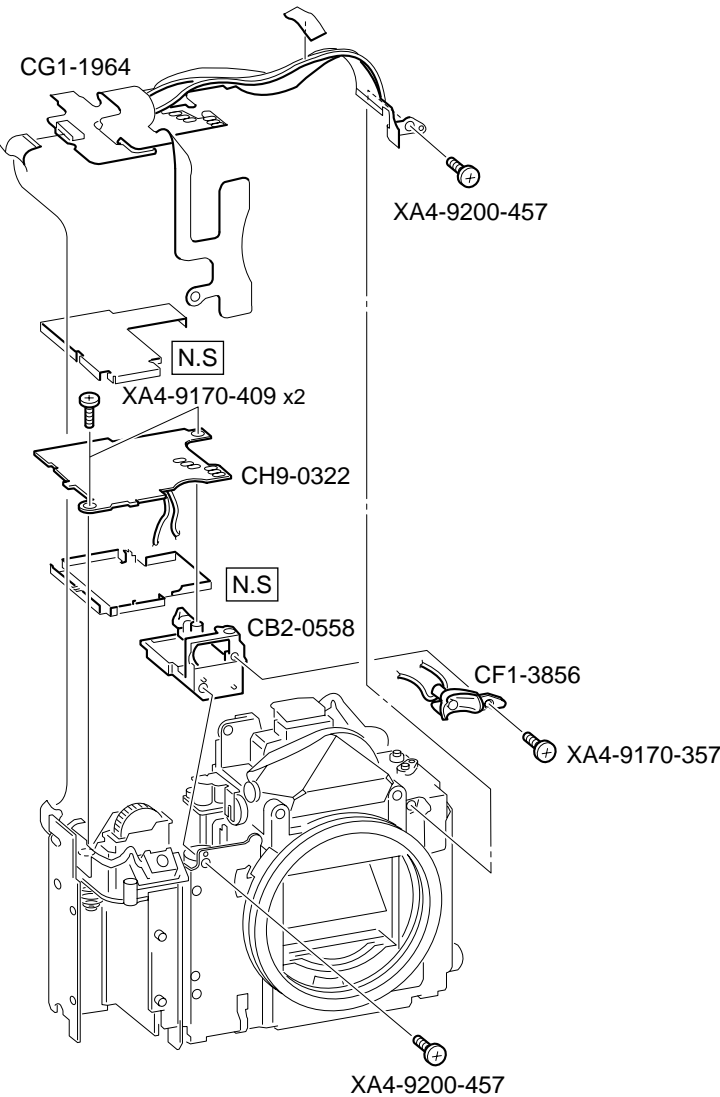
REF.NO. C18-1021

NEW	PARTS NO.	CLASS	QTY	D E S C R I P T I O N
*	CB2-0670-000	C	1	SHIELD, C-MOS RUBBER
*	CB2-0696-000	C	1	SHEET, ANALOG PCB
*	CG1-1956-000	C	1	PCB ASS'Y, ANALOG
*	CY1-6061-000	C	1	FILTER, IR/LPF
*	CY1-6064-000	C	1	C-MOS ASS'Y
	XA1-7170-309	F	3	SCREW M17X3
	XA4-9170-457	F	3	SCREW M17x4

CANON EOSD30

C18-1021

P A R T S L I S T

REF.NO. C18-1021

NEW	PARTS NO.	CLASS	QTY	D E S C R I P T I O N
*	CB2-0558-000	C	1	BODY, RIGHT
*	CF1-3856-000	C	1	LAMP ASS’Y, AF SUPPORT
*	CG1-1964-000	C	1	FPC ASS’Y, MD
*	CH9-0322-000	C	1	PCB ASS’Y, DC/DC
	XA4-9170-357	F	1	SCREW M17X3.5
	XA4-9170-409	F	2	SCREW M17x4
	XA4-9200-457	F	2	SCREW M2X4.5

CANON EOSD30
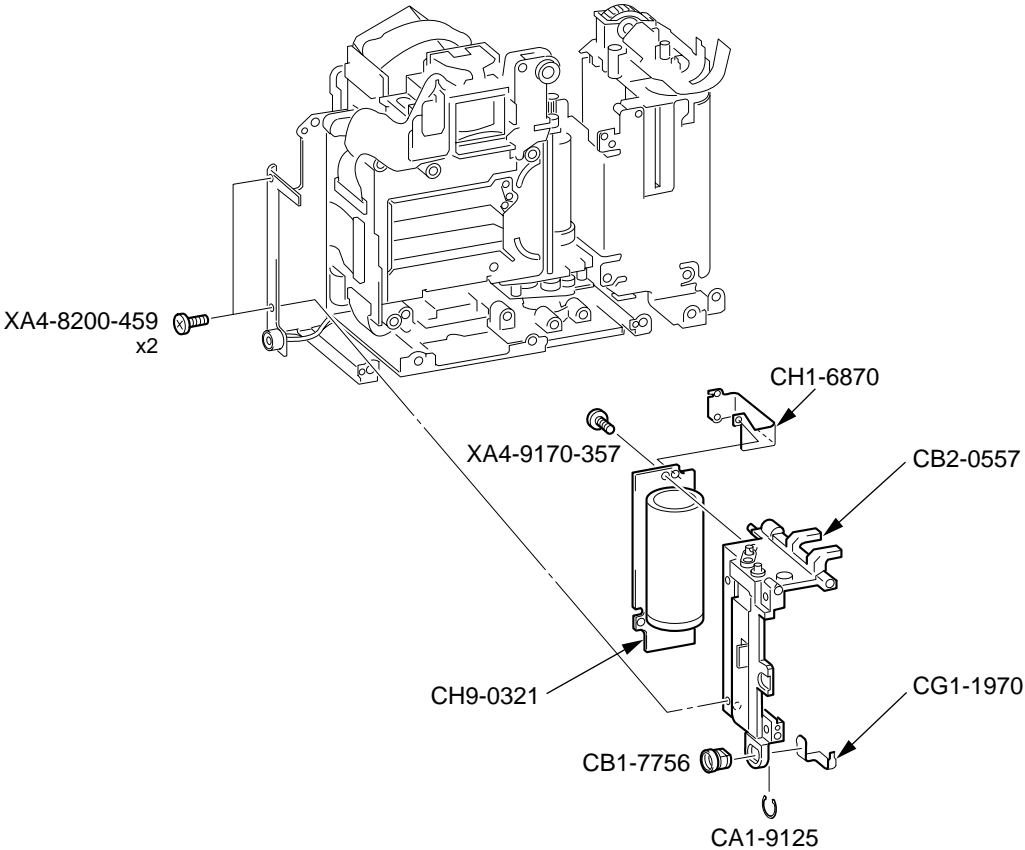
C18-1021

P A R T S L I S T
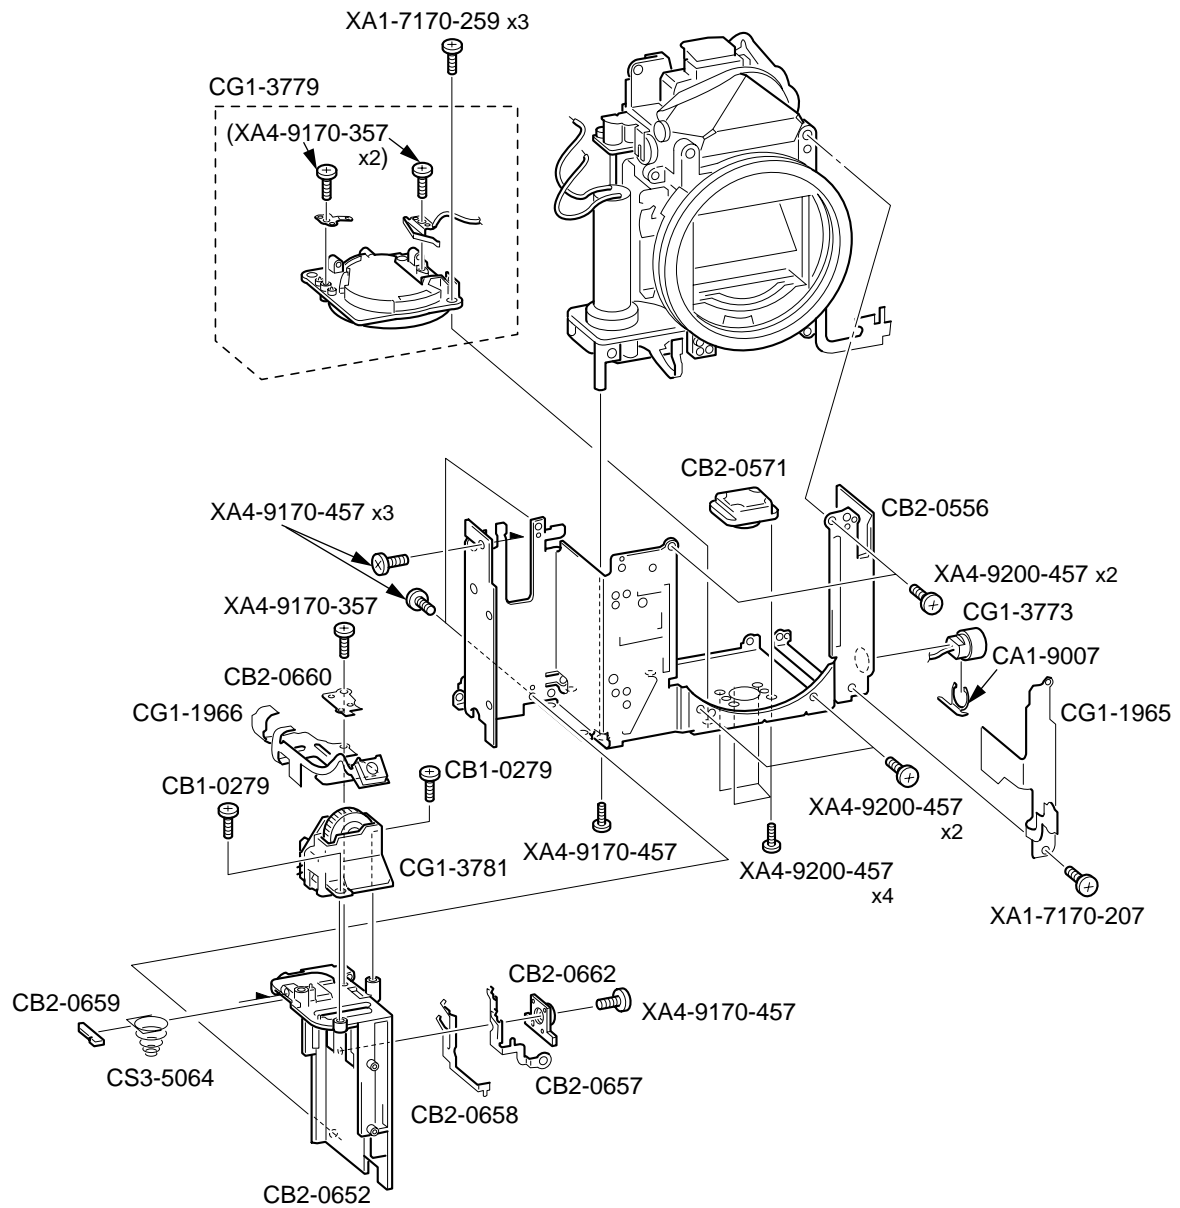
REF.NO. C18-1021

NEW	PARTS NO.	CLASS	QTY	D E S C R I P T I O N
	CA1-9125-000	C	1	STOPPER, RT CONNECTOR
	CB1-7756-000	C	1	CONNECTOR, REMOTE
*	CB2-0557-000	C	1	BODY, LEFT
*	CG1-1970-000	C	1	FPC ASS'Y, REMOTE
*	CH1-6870-000	C	1	FPC (DE-SP LIGHT)
*	CH9-0321-000	C	1	PCB ASS'Y, SP LIGHT
	XA4-8200-459	F	2	SCREW M2X4.5
	XA4-9170-357	F	1	SCREW M17X3.5

CANON EOSD30

C18-1021

P A R T S   L I S T

REF.NO. C18-1021

NEW	PARTS NO.	CLASS	QTY	D E S C R I P T I O N
	CA1-9007-000	C	1	STOPPER, PC TERMINAL
*	CB1-0279-000	C	2	SCREW M17X4.5
*	CB2-0556-000	C	1	BODY, FRONT
*	CB2-0571-000	C	1	SOCKET, TRIPOD
*	CB2-0652-000	C	1	CASE, MAIN BATTERY
*	CB2-0657-000	C	1	CONTACT, BATTERY 1
*	CB2-0658-000	C	1	CONTACT, BATTERY 2
*	CB2-0659-000	C	1	HOLDER, BATTERY SPRING
*	CB2-0660-000	C	1	PLATE, SW HOLDER
*	CB2-0662-000	C	1	HOLDER, CONTACT
*	CG1-1965-000	C	1	FPC ASS’Y, FRONT
*	CG1-1966-000	C	1	FPC ASS’Y, RELEASE
*	CG1-3773-000	C	1	TERMINAL ASS’Y, PC
*	CG1-3779-000	C	1	CASE ASS’Y, DATE BATTERY
*	CG1-3781-000	C	1	MAIN DIAL ASS’Y
*	CS3-5064-000	C	1	SPRING, COIL
	XA1-7170-207	F	1	SCREW M17X2
	XA1-7170-259	F	3	SCREW M17X2.5
	XA4-9170-357	F	3	SCREW M17X3.5
	XA4-9170-457	F	5	SCREW M17X4.5
	XA4-9200-457	F	8	SCREW M2X4.5

CANON EOSD30
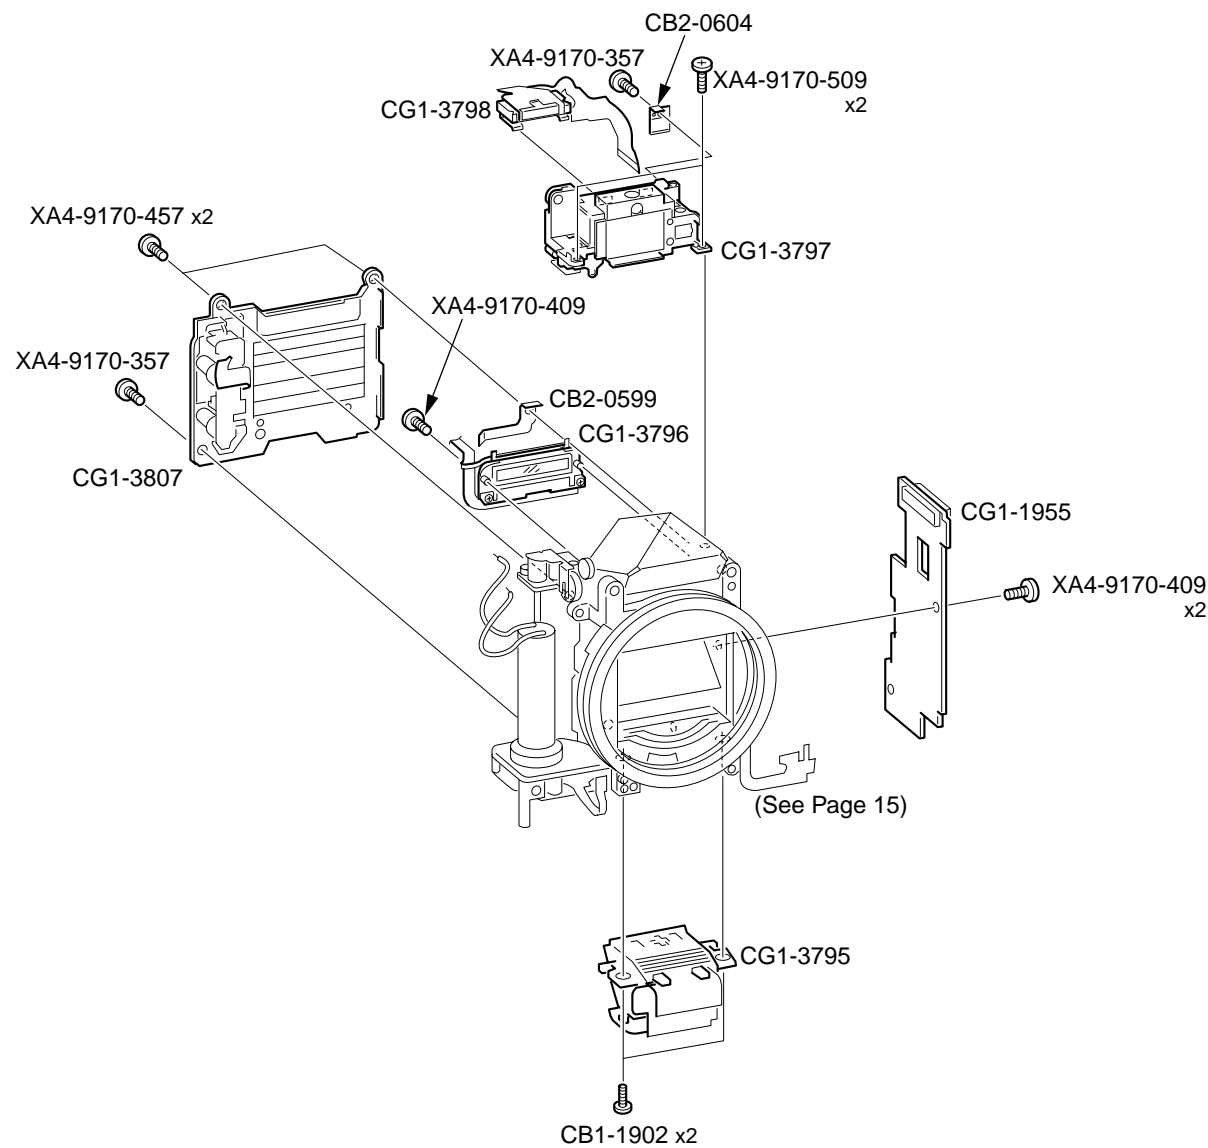
C18-1021

P A R T S L I S T
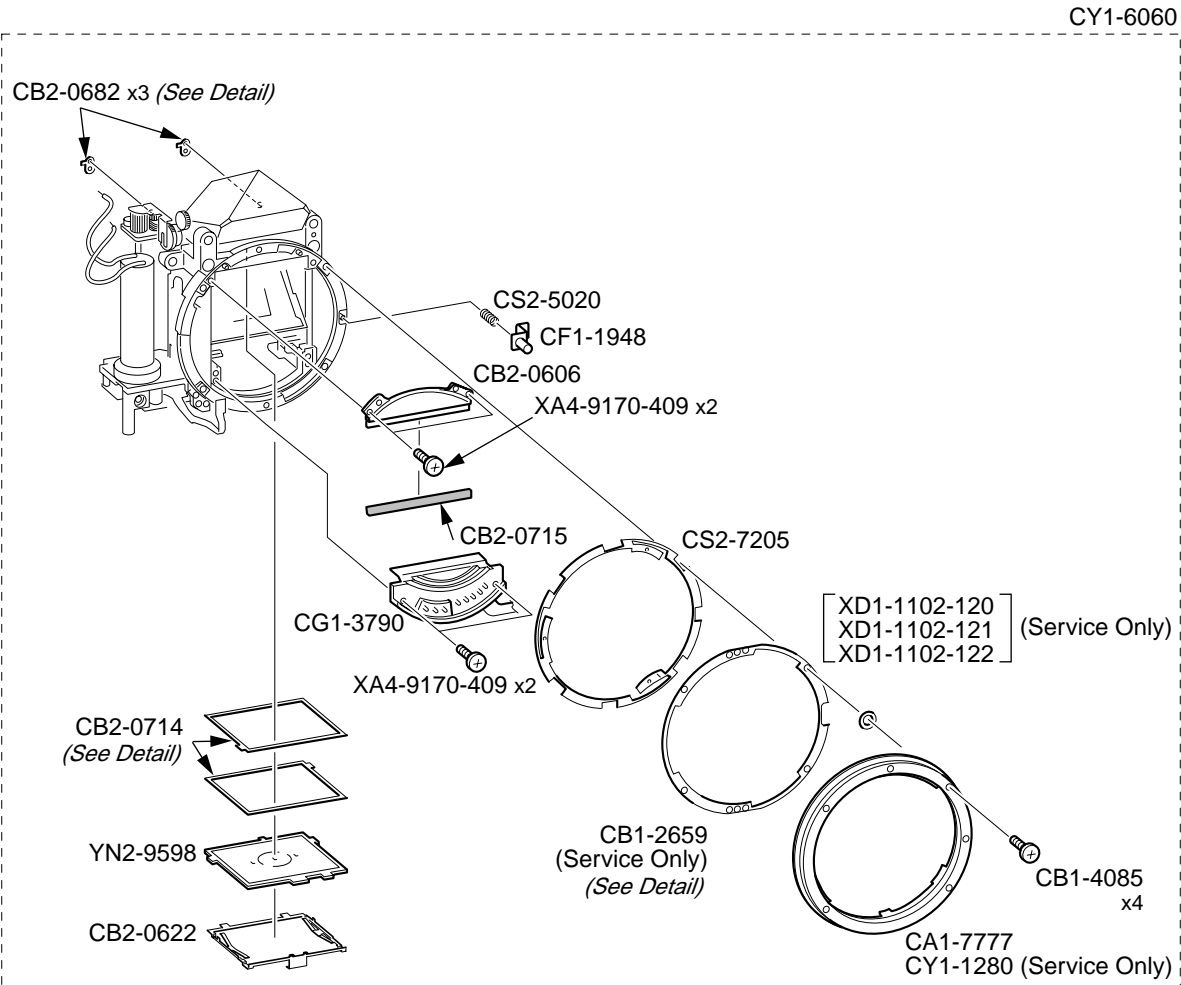
REF.NO. C18-1021

NEW	PARTS NO.	CLASS	QTY	D E S C R I P T I O N
*	CB1-1902-000	C	2	SCREW M17X4
*	CB2-0599-000	C	1	SPRING, PLATE
*	CB2-0604-000	C	1	SPRING, PLATE
*	CG1-1955-000	C	1	PCB ASS'Y, CAMERA MAIN
*	CG1-3795-000	C	1	AUTO FOCUS ASS'Y
*	CG1-3796-000	C	1	VF LCD ASS'Y
*	CG1-3797-000	C	1	EYEPIECE LENS ASS'Y
*	CG1-3798-000	C	1	SPC SENSOR ASS'Y
*	CG1-3807-000	E	1	SHUTTER ASS'Y
	XA4-9170-357	F	2	SCREW M17X3.5
	XA4-9170-409	F	3	SCREW M17x4
	XA4-9170-457	F	2	SCREW M17X4.5
	XA4-9170-509	F	2	SCREW M17X5

CANON EOSD30

C18-1021

CY1-6060

CB2-0682 x3 *(See Detail)*

CS2-5020

CF1-1948

CB2-0606

XA4-9170-409 x2

CB2-0715

CS2-7205

XD1-1102-120
XD1-1102-121
XD1-1102-122 (Service Only)

CG1-3790

XA4-9170-409 x2

CB2-0714 *(See Detail)*

YN2-9598

CB2-0622

CB1-2659 (Service Only) *(See Detail)*

CB1-4085 x4

CA1-7777
CY1-1280 (Service Only)

CB2-0682-000 (XXX) detail

A (XXX)	A	SIZE
	0.03 mm	(003)
	0.05 mm	(005)
	0.08 mm	(008)
	0.10 mm	(010)
	0.12 mm	(012)
	0.15 mm	(015)
	0.18 mm	(018)
	0.20 mm	(020)

CB1-2659-000 (XXX) detail

B (XXX)	B	SIZE
	0.05 mm	(005)
	0.08 mm	(008)
	0.10 mm	(010)
	0.12 mm	(012)
	0.15 mm	(015)
	0.18 mm	(018)

CB2-0714-000 (XXX) detail

C (XXX)	C	SIZE
	0.05 mm	(005)
	0.10 mm	(010)
	0.15 mm	(015)
	0.20 mm	(020)
	0.25 mm	(025)
	0.30 mm	(030)
	0.35 mm	(035)
	0.40 mm	(040)
	0.45 mm	(045)
	0.50 mm	(050)

PARTS LIST

REF.NO. C18-1021

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
	CA1-7777-000	C	1	MOUNT, BODY	
	CB1-2659-000 (XXX)	C	1	SPACER, MOUNT	
	CB1-4085-000	C	4	SCREW M2X6.5	
*	CB2-0606-000	C	1	COVER, MIRROR BOX	
*	CB2-0622-000	C	1	SPRING, SCREEN	
*	CB2-0682-000 (XXX)	C	3	WASHER, FB ADJ.	
*	CB2-0714-000 (XXX)	C	1	WASHER, SCREEN ADJ.	QTY 1 or 2
*	CB2-0715-000	C	1	CUSHION	
	CF1-1948-000	C	1	LEVER, LENS LOCK	
*	CG1-3790-000	C	1	CONTACT ASS'Y, LENS MOUNT	
	CS2-5020-000	C	1	SPRING, COIL	
	CS2-7205-000	C	1	SPRING, MOUNT	
	CY1-1280-000	C	1	MOUNT, BODY (0.1mm under)	
*	CY1-6060-000	C	1	MIRROR BOX ASS'Y	
	XA4-9170-409	F	4	SCREW M17x4	
	XD1-1102-120	F	1	WASHER (0.05mm)	
	XD1-1102-121	F	1	WASHER (0.1mm)	
	XD1-1102-122	F	1	WASHER (0.2mm)	
*	YN2-9598-000	C	1	SCREEN, FOCUSING	

E L E C T R I C P A R T S L I S T

REF.NO. C18-1021

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION	
*	CY4-6068-000	D	1	FUSE 32V/3A	
*	Y11-3901-000	C	1	LEAD (WHITE)	7 CORES/0.6mm
*	Y11-3902-000	C	1	LEAD (BLACK)	7 CORES/0.6mm
*	Y11-3903-000	C	1	LEAD (RED)	7 CORES/0.6mm
*	Y11-3906-000	C	1	LEAD (PINK)	7 CORES/0.6mm
*	Y11-3907-000	C	1	LEAD (YELLOW)	7 CORES/0.6mm
*	Y11-3909-000	C	1	LEAD (GREEN)	7 CORES/0.6mm
*	Y11-3914-000	C	1	LEAD (GRAY)	7 CORES/0.6mm
*	Y11-5002-000	C	1	LEAD (BLACK)	30 CORES/1.2mm
*	Y11-5003-000	C	1	LEAD (RED)	30 CORES/1.2mm
*	Y11-5006-000	C	1	LEAD (PINK)	30 CORES/1.2mm
*	Y11-5011-000	C	1	LEAD (BLUE)	30 CORES/1.2mm
*	Y11-5014-000	C	1	LEAD (GRAY)	30 CORES/1.2mm

Accessories Section

Strap (with eyepiece cover)
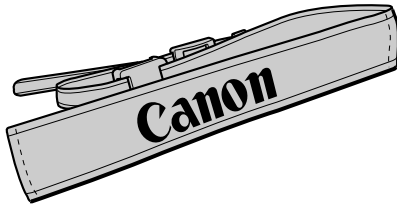
N.S (Product Available)

Battery Pack BP-511
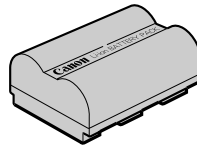
N.S (Product Available)
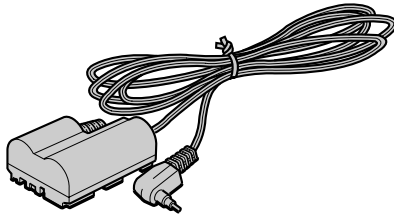
Compact Power Adapter CA-PS400
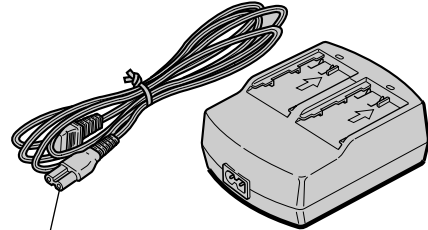
WT3-5062
WT3-5063
WT3-5064
WT3-5115
WT3-5066

N.S (Product Available)

DC Coupler DR-400

N.S (Product Available)

CompactFlash Card FC-16M

N.S (Product Available)

Interface Cable IFC-200 PCU
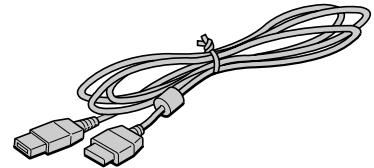
N.S (Product Available)

Video Cable VC-100
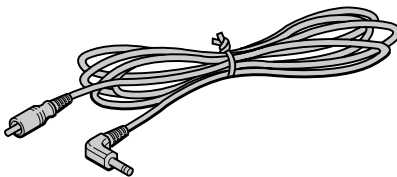
N.S (Product Available)
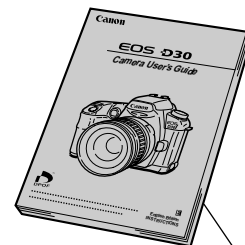
Canon Digital Camera Solution Disk, Adobe Photoshop LE Disk
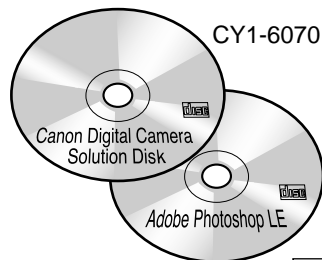
CY1-6070

N.S

EOS D30 Camera User's Guide (this document)

CDI-J007-010
CDI-E008-010
CDI-F007-010

Software Starter Guide
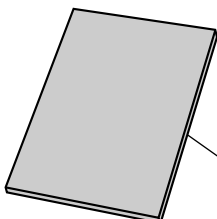
CDI-J008-010
CDI-E009-010
CDI-F008-010

PARTS LIST

NEW	PARTS NO.	CLASS	DESCRIPTION	REMARKS
	WT3-5062-000	C	CABLE, AC (JPN)	FOR JAPAN
	WT3-5063-000	C	CABLE, AC (USA)	FOR USA, CANADA
	WT3-5064-000	C	CABLE, AC (EUR)	FOR EUROPE, ASIA
*	WT3-5115-000	C	CABLE, AC (UK)	FOR ASIA
	WT3-5066-000	C	CABLE, AC (AUSTRALIA)	FOR AUSTRALIA
*	CY1-6070-000	S	CD-ROM, D30 SOLUTION DISK	Except EUROPE
*	CDI-J007-010	S	CAMERA USER GUIDE (J)	FOR JAPAN
*	CDI-E008-010	S	CAMERA USER GUIDE (E)	FOR USA, CANADA, EUROPE, ASIA, AUSTRALIA
*	CDI-F007-010	S	CAMERA USER GUIDE (F)	FOR CANADA
*	CDI-J008-010	S	SOFTWARE GUIDE (J)	FOR JAPAN
*	CDI-E009-010	S	SOFTWARE GUIDE (E)	FOR USA, CANADA, EUROPE, ASIA, AUSTRALIA
*	CDI-F008-010	S	SOFTWARE GUIDE (F)	FOR CANADA

INDEX OF PARTS LIST

REF.NO. C18-1021

I N D E X O F P A R T S L I S T

REF.NO. C18-1021

INDEX OF PARTS LIST

REF.NO. C18-1021

CANON BG-ED3

C59-4001

Ⓛ：ロゲネストラムダA−74
塗付位置

Ⓛ: Logenest Lambda A-74
(lubricant applying point)

P A R T S L I S T

REF.NO. C59-4001

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA4-5106-000	C	1	SCREW, TRIPOD
	CA4-5160-000	C	1	WASHER, SPRING
*	CB4-0032-000	C	6	SCREW M17X5
*	CB4-0680-000	B	1	BASE, CONTACT
*	CB4-0681-000	B	1	COVER, CONTACT TOP
*	CB4-0682-000	C	2	TERMINAL, POWER
*	CB4-0683-000	B	1	COVER, CONTACT BOTTOM
*	CB4-0685-000	B	1	CAP, TERMINAL
*	CB4-0689-000	C	1	DIAL, TRIPOD
*	CB4-0694-000	C	1	COVER, TOP
*	CB4-0700-000	C	4	SCREW M17X4.5
*	CB4-0701-000	C	3	SCREW M17X6.5
*	CB4-0702-000	C	11	CONTACT, PIN
*	CH1-1582-000	C	1	PCB, CONTACT
*	CH1-1584-000	C	1	FPC, CONTACT
*	CS3-5094-000	C	11	SPRING, CONTACT
	XA1-7170-167	F	1	SCREW M17X1.6
	XA1-7170-307	F	3	SCREW M17X3.0
	XA4-5170-359	F	1	SCREW M17X3.5
	XA4-9170-459	F	5	SCREW M17X4.5

CANON BG-ED3

C59-4001
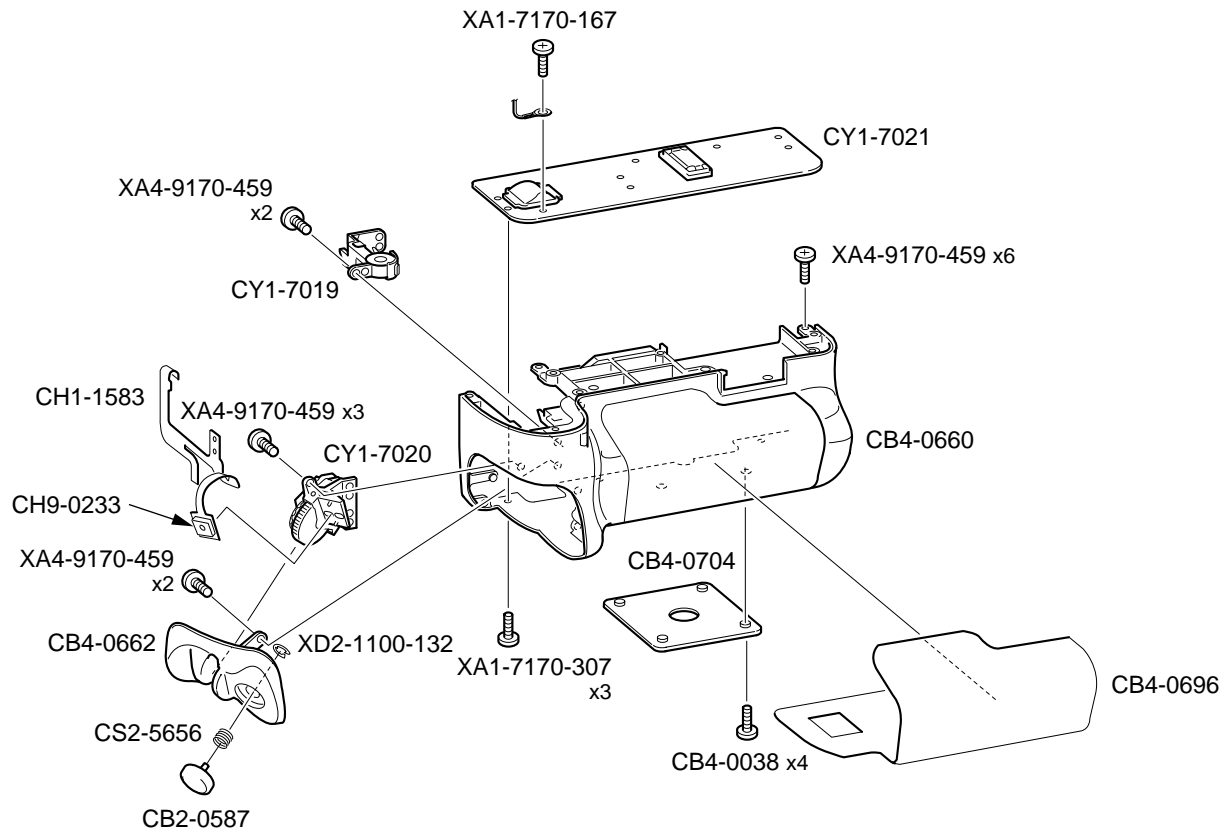
PARTS LIST

REF.NO. C59-4001

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
*	CB2-0587-000	C	1	BUTTON, RELEASE
*	CB4-0038-000	C	4	SCREW M17X3
*	CB4-0660-000	B	1	CASE, FRONT
*	CB4-0662-000	B	1	COVER, RELEASE
*	CB4-0696-000	B	1	LEATHER, MAIN
*	CB4-0704-000	B	1	COVER, TRIPOD SOCKET
*	CH1-1583-000	C	1	FPC, RELEASE
	CH9-0233-000	C	1	SWITCH, RELEASE
	CS2-5656-000	C	1	SPRING, COIL
*	CY1-7019-000	C	1	GRIP ON/OFF SWITCH ASS’Y
*	CY1-7020-000	C	1	DIAL ASS’Y
*	CY1-7021-000	C	1	BASE PLATE ASS’Y
	XA1-7170-167	F	1	SCREW M17X1.6
	XA1-7170-307	F	3	SCREW M17X3.0
	XA4-9170-459	F	13	SCREW M17X4.5
	XD2-1100-132	F	1	E RING

CANON BG-ED3

C59-4001
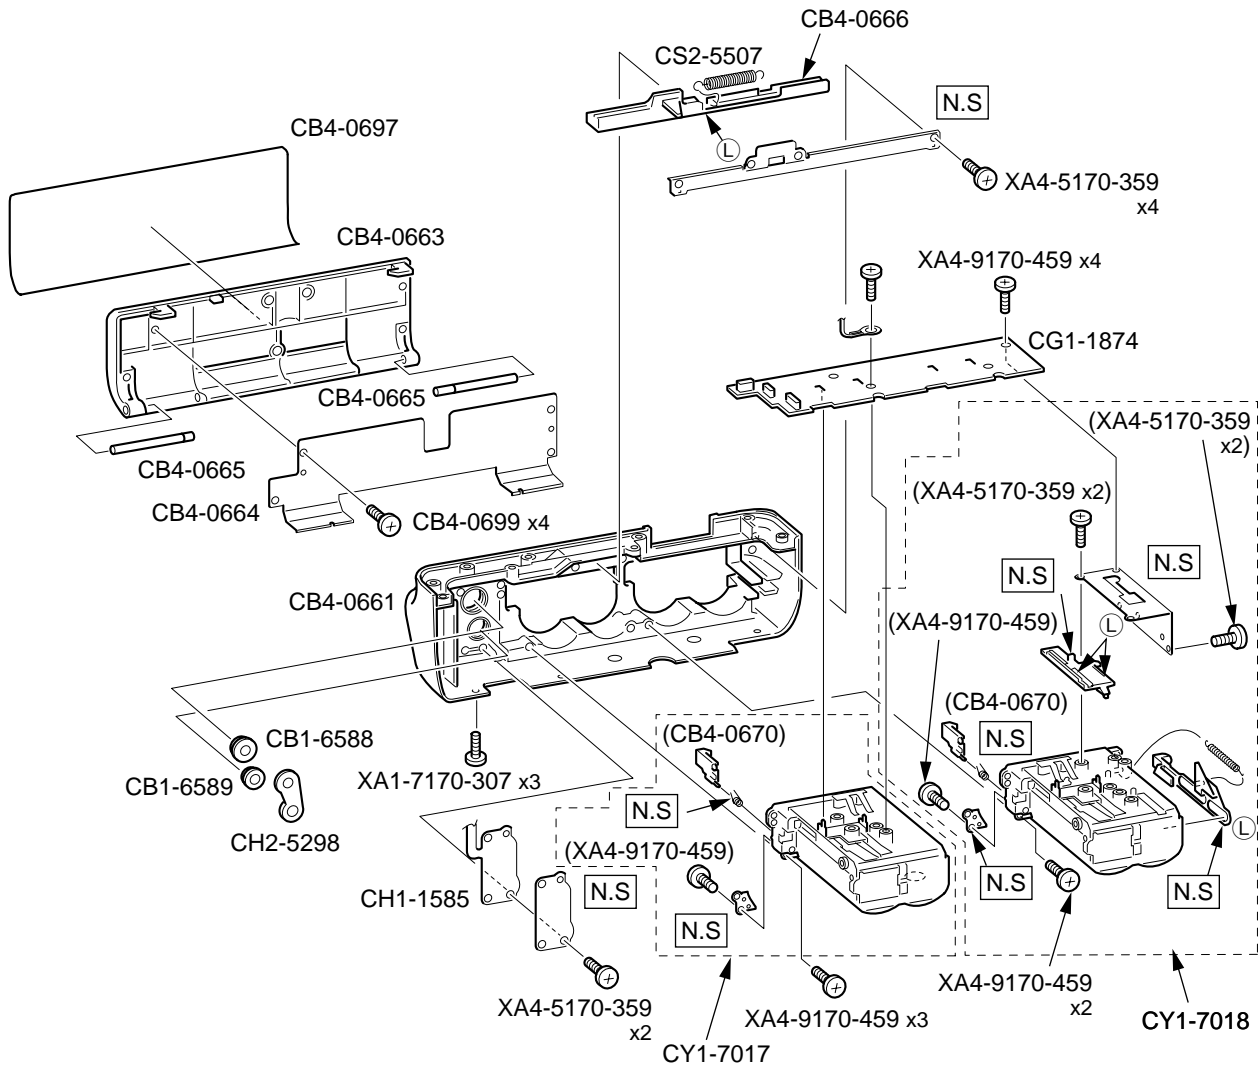
Ⓛ：ロゲネストラムダA−74
塗付位置

Ⓛ: Logenest Lambda A-74
(lubricant applying point)

PARTS LIST

REF.NO. C59-4001

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
*	CB1-6588-000	C	1	BUTTON, AE-L
*	CB1-6589-000	C	1	BUTTON, AF-L
*	CB4-0661-000	B	1	CASE, REAR
*	CB4-0663-000	C	1	DOOR, BATTERY
*	CB4-0664-000	C	1	COVER, BATTERY DOOR
*	CB4-0665-000	C	2	SHAFT
*	CB4-0666-000	C	1	LEVER, BAT. DOOR
*	CB4-0670-000	C	2	LEVER, BAT. LOCK
*	CB4-0697-000	B	1	LEATHER, BATTERY DOOR
*	CB4-0699-000	C	4	SCREW M17X3.0
*	CG1-1874-000	C	1	PCB ASS'Y, MAIN
*	CH1-1585-000	C	1	FPC, REAR SW
*	CH2-5298-000	C	1	RUBBER, CONTACT
	CS2-5507-000	C	1	SPRING, COIL
*	CY1-7017-000	C	1	BATTERY BOX RIGHT ASS'Y
*	CY1-7018-000	C	1	BATTERY BOX LEFT ASS'Y
	XA1-7170-307	F	3	SCREW M17X3.0
	XA4-5170-359	F	10	SCREW M17X3.5
	XA4-9170-459	F	11	SCREW M17X4.5

INDEX OF PARTS LIST

REF.NO. C59-4001